




## LuxHome Wireless Caravan Alarm System – User Guide


### KEY:

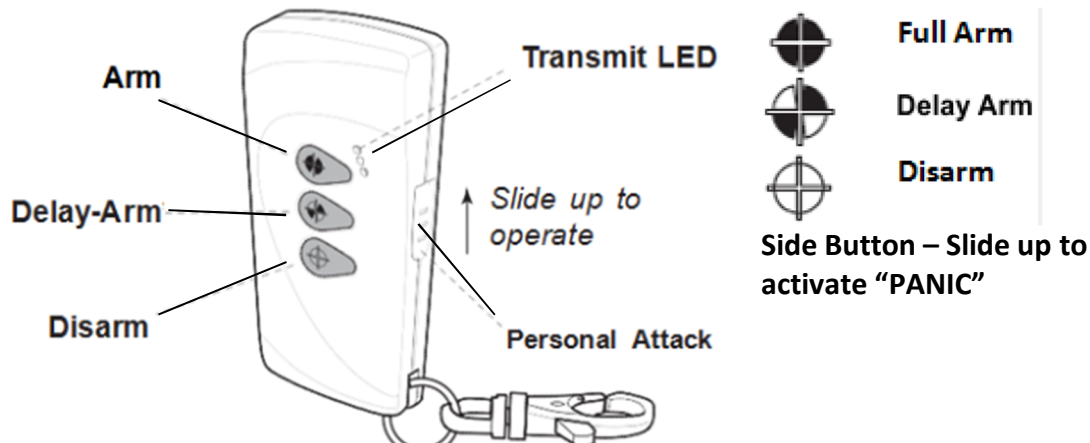

### ARM/DISARM

#### From Outside the Caravan


To **Arm** (turn on) the Alarm:

Press:  on the Remote Control.

Bell Box Action: 1 x Beep, 1 x Strobe Flash = System Armed.

#### From Inside the Caravan

To **Arm** (turn on) the Alarm with a 15 Second Delay.

Press:  on the Remote Control.


Bell Box Action: 1 x Beep, 1 x Strobe Flash = 15 Second Countdown.

Followed By:

1 x Beep, 1 x Strobe Flash = System Armed.

#### From Outside the Caravan

To **Disarm** (turn off) the Alarm:

Press:  on the Remote Control.

Bell Box Action: 2 x Beep, 2 x Strobe Flash = System Disarmed.

### PANIC

To activate “Panic” and Trigger the Siren:

Slide the Side Button Up.

Bell Box Action: Full Alarm for 3 minutes or until disarmed.



## Low Battery

Once Low Battery is indicated, alarm works as normal, change battery's with 2 weeks.


When the Low Battery is:

### **Door/Window Contact**

- Normal Mode, No LED Indication (Battery OK)
- Low Battery, Flashing LED on Open/Close.

### **Passive Infra-RED**

- Normal Mode, No LED Indication (Battery OK)
- Low Battery, Flashing LED when movement detected

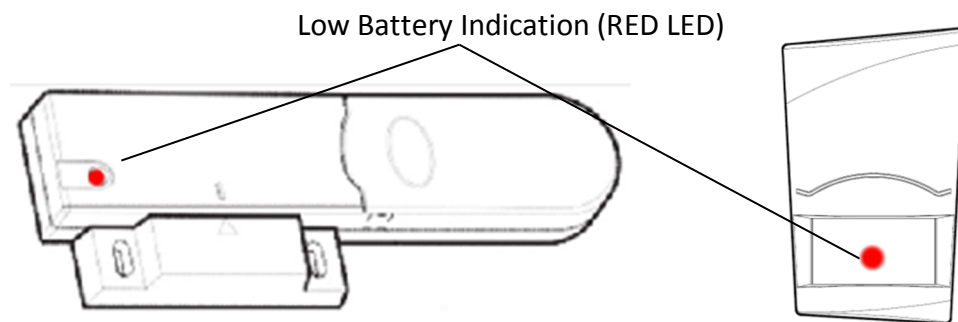

### **Remote Control**

When the Remote Control is operated under low battery conditions the transmit LED will continue to flash after the button has been released.

- Under normal battery conditions the LED will extinguish when the button is released.

### **Changing the Batteries**

1, Put the Siren into **Service Mode**: to disable Tamper Activation when Pir/Contact cover is removed, to do this:

Press and Hold:  for 6 seconds.

Bell Box Action: 2 x Beeps as button is pressed

1 x Long Beep after 6 seconds = Alarm in Service Mode

Replace Batteries as required, then:

2, Put the Siren back into **Normal Mode**:

Press and Hold:  for 6 seconds.

Bell Box Action: 1 x Long Beep = normal mode, disarmed